





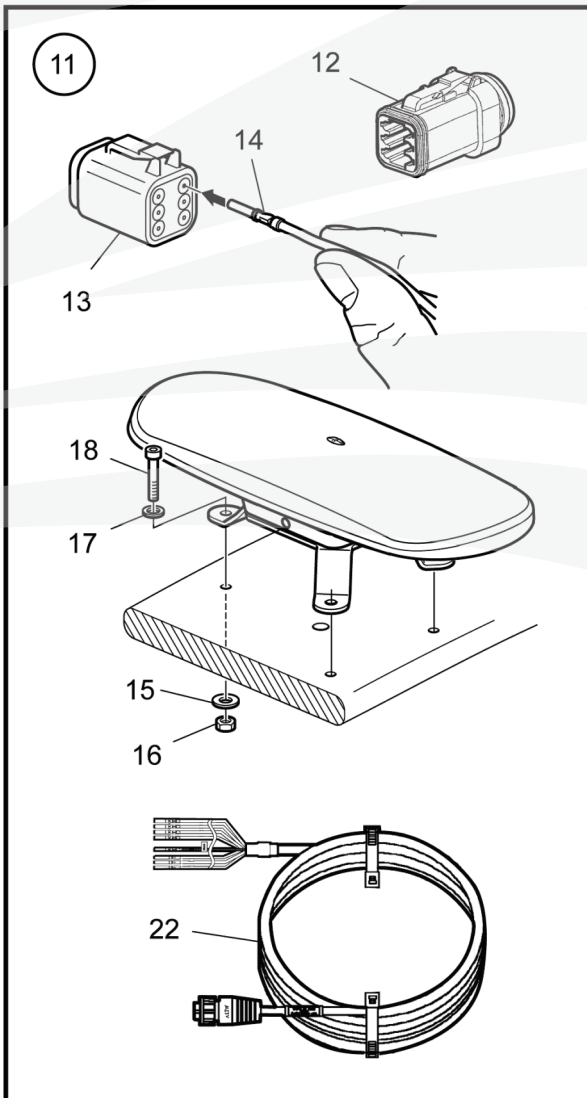 
7

8

WARNING
 When DPS is in Use Boat is Underway



 Maintain proper LOOKOUT	 STAY OUT of water - spinning propellers.
 HOLD ON to prevent falls - boat can move suddenly	 READ the owner's manual

Failure to observe warnings may result in SEVERE INJURY or DEATH.

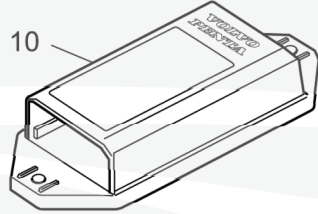 
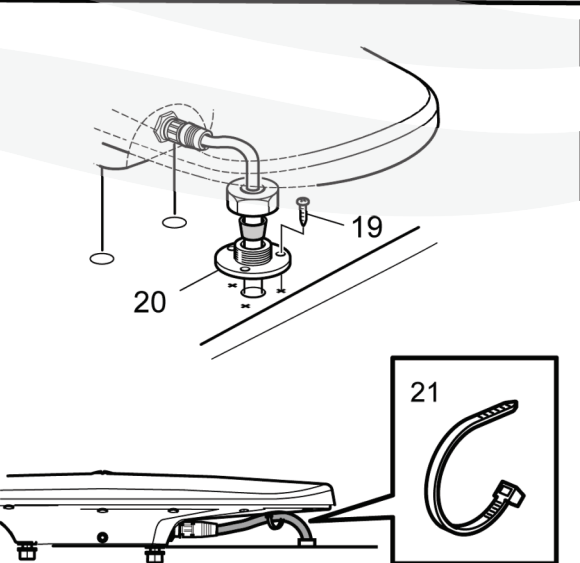 


9

WARNING

	Avoid severe injury or death due to drowning, falls or propeller contact.
	Do not stay on the swim platform when engine is running.
	Propellers can spin without warning while engines are running.
	Do not enter the water while engines are running.
	Boat can move suddenly.
	Hold on while on the swim platform.

10

28821

REF	PART NO.	QTY	DESCRIPTION
1	22721733	1	Antenna
1		1	Antenna
2	22688297	1	Antenna base
3	9510227	1	Anti-rust agent
4	22658168	1	Sensor Obsolete part
5	941670	8	Washer
6	994138	5	Hex. socket screw
7		1	Publication set
8	21318999	1	Decal
9	21325536	1	Label
10	21231837	1	Converter
11		1	Small parts kit
12	874961	1	Wedge
13	874960	1	Housing
14	8397660	2	Cable seal
15	941670	3	Washer
16	946330	3	Hexagon nut
17	993419	3	Washer
18	961314	3	Cross recessed screw
19	994153	3	Hex. socket screw
20	21303890	1	Cable grommet
21	948211	2	Cable tie
22	23128978	1	Cable